

D LED-Einbaustrahler



Stromschlaggefahr!

Beauftragen Sie mit der Installation eine Elektro-Fachkraft. Für Strahler, die nicht gemäß den europäischen Sicherheitsrichtlinien installiert wurden, entfällt jeder Haftungsanspruch.



Brandgefahr!

Strahler nicht mit wärmedämmenden Stoffen abdecken.



Achtung!


Für alle Anschlüsse sekundärseitig des Konverters ist ausschließlich zweiadrig flexible Niedervoltleitung zu verwenden.

Der Strahler ist zur Montage auf normal entflammaren Oberflächen geeignet, z.B. auf Holz und Werkstoffen auf Holzbasis mit mehr als 2 mm Dicke. Strahler nur nach unten strahlend montieren.

Bei Einbau in Betondecken oder anderen hohen thermischen Belastungen in der Decke (nur möglich mit Stahl-/Edelstahl-Einbaustrahlern) einen dafür geeigneten Deckeneinbautopf verwenden.


a) Einbau mit Haltefedern:

Die Haltefedern müssen nach der Installation in horizontaler Position liegen, nicht vertikal.

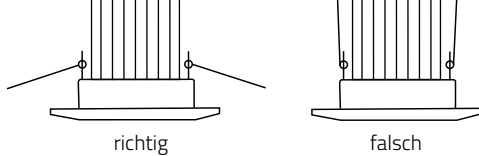

b) Einbau mit Blattfedern:

Blech der Blattfeder an den Strahler heran drücken und in das Einbauloch einsetzen, sodass die Feder am Ende der Materialstärke wieder umklappen kann.

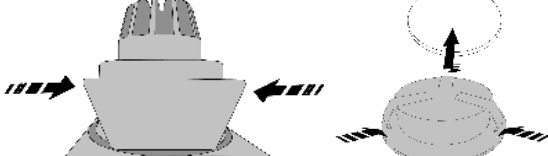

Technische Daten: siehe Aufkleber auf Einbaustrahler.

Inbetriebnahme:

Schutzklasse 3 – bis 50 V (AC) – 120 V (DC)

Sicherheitstransformator nach

EN 61558, elektronischen

Konverter nach EN 61347 oder

eine Spannungsquelle nach DIN

VDE 0100, Teil 410 verwenden.

Für den Anschluss unbedingt

Anleitung des verwendeten

Gerätes beachten.



Equiv.

SELV

CE-konform mit den zutreffenden

europäischen Richtlinien.



Achtung! Gilt nur für Dim To Warm!

Um eine Lichtfarbregulierung zu realisieren,

muss der Konverter primärseitig mittels

Phasenabschnittsdimmung reguliert werden

(z.B. Berker 286710).

Montage



Stromschlaggefahr!

Vor der Installation Spannung abschalten.

Sicherstellen, dass die Spannung nicht

versehentlich wieder eingeschaltet

werden kann.

- 1) Loch am Montageort sägen

(Durchmesser siehe Verpackung).



- 2a) **Bei Verwendung von einfarbigen LED-Modulen**

LED-Modul / COB-EBS an die Sekundärseite

des Konverters anschließen. An die Primärseite

des Konverters die 230 V AC Netzspannung

anschließen.

- b) **Bei Verwendung von mehrfarbigen LED-Modulen**

LED-Modul an die Sekundärseite des entspre-

chenden LED-Steuergerätes (z.B. 80440,

80290) anschließen. Die Primärseite des LED-

Steuergerätes wird mit Hilfe von 12/24 V DC

LED-Netzgeräten versorgt.

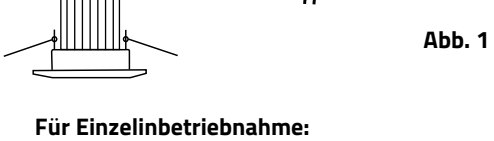


Abb. 1

Für Einzelinbetriebnahme:

LED-Modul mit Hilfe einer Anschlussklemme

unter Beachtung der Polarität mit dem

Konverter verbinden.

Für Gruppeninbetriebnahme:


LED-Module in Reihe verdrahten

und mit Hilfe der Anschluss-

klemme unter Beachtung der Polarität mit

dem Konverter verbinden.

Reihenschaltung



3. Federn zusammendrücken und Strahler in das

ausgesägte Loch einsetzen (siehe Abb. 2).

4. Spannung einschalten.

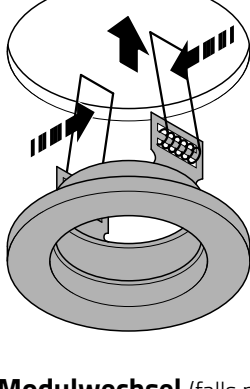


Abb. 2

Modulwechsel (falls möglich*)



Stromschlaggefahr!

Vor dem Lampenwechsel immer

Spannung abschalten.

Modelle mit Sprengring

1. Sprengring zusammendrücken und abnehmen.
2. Modul herausnehmen.
3. Neues Modul einsetzen und anschließen.
4. Sprengring wieder einsetzen.

Modelle mit Bajonettverschluss:

1. Bajonettverschluss entgegen dem Uhrzeigersinn drehen und abnehmen.
2. Modul herausnehmen.
3. Top-Stecker lösen und Modul entnehmen.
4. Top-Stecker des neuen Moduls verbinden.
5. Bajonettverschluss aufsetzen und im Uhrzeigersinn festdrehen.

* Information finden Sie auf dem Energieeffizienzklassenlabel (www.rutecprojekt.de)

Achtung!

Edelstahl Einbaustrahler benötigen eine

regelmäßige Pflege.

Bitte verwenden Sie zur Reinigung keine

scharfen Reinigungsmittel.

Wir empfehlen die Reinigung mit dem

Artikel 55317 (surface cleaner) und dem

Artikel 55316 (Schwamm-Universalreiniger).



Carl-Zeiss-Str. 15

28857 Syke

GB LED Downlights

Danger of electrocution!

Be sure to have a professional electrician complete installation. There is no warranty coverage for any lamps installed without observing European safety directives.

Fire hazard!

Do not cover lamps with heat-insulating materials.



Caution!

Use a flexible voltage cable with two cores at the secondary side of the converter.

The lamp is suitable for mounting on normally amenable surfaces such as wood

and particle board materials which

are more than 2 mm thick. Only install lamps

so that they shine downwards.

For the installation in concrete ceilings or

other extreme thermal conditions (only

possible with steel/stainless steel

downlights), please use an installation pot.


Make sure that the springs are in the right

position.


a) Installation with mounting springs:

Make sure that the springs are in the right

position.



right



wrong

b) Installation with leaf springs:

Press sheet of the leaf spring against the

spotlight and insert into the mounting hole

so that the spring can fold over again at the

end of the material thickness.

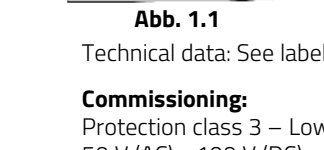


Abb. 1.1

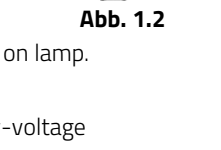


Abb. 1.2

Technical data: See label on lamp.

Commissioning:

Protection class 3 – Low-voltage

50 V (AC) – 100 V (DC).

Use a safety transformer

complying with EN 61558,

electronic step-down converter

complying with EN 61347 or a

voltage source complying with

DIN VDE 0100, Part 410.

Be sure to observe the instructions for


installation of the device being used.



Equiv.
SELV

CE compliant with the applicable

European directives.



Caution!

Only necessary for Dim To Warm!

To realize a color temperature control, the

used converter has to be regulated by phase

cut dimming on the primary side (e.g. Berker

286710)

Installation

Danger of electrocution!

Switch off voltage prior to installation.

Ensure that voltage cannot be accidentally

switched on again.

1. Saw a hole at the installation location (see package for diameter).
- 2a) **When using single color LED modules**
Connect LED module / COB LED to the secondary side of the converter.
The primary side of the converter has to be connected with 230V AC mains voltage.
- b) **When using multicolor LED modules**
Connect LED module to the secondary side of the corresponding LED control unit (for e.g., 80440, 80290).
The primary side of the LED control unit is powered by 12/24 V DC LED power supplies.

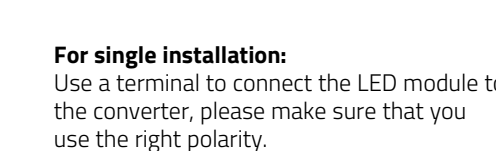


Fig. 1

For single installation:

Use a terminal to connect the LED module to

the converter, please make sure that you

use the right polarity.

For group installation:

Use a terminal to connect the LED

modules in series to the converter.



3. Press the springs together and place the lamp in the sawn out hole (see Figure 2).
4. Power on.

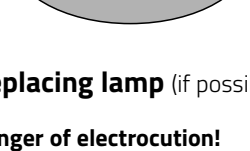


Fig. 2

Replacing lamp (if possible*)

Danger of electrocution!

Always disconnect voltage before replacing

the lamp.

Models with snap ring

1. Press snap ring together and remove.
2. Take the module out of the fixture.
3. Insert a new module.
4. Put snap ring back in. The snap ring is seated properly when the module is fixed in the highest possible position and the end of the snap ring points downward.

Models with quarter-turn fastener:

1. Turn the quarter-turn fastener anticlockwise and remove it.
2. Take the module out of the fixture.
3. Insert a new module.
4. Put quarter-turn fastener on and tighten by turning clockwise.

* The information can be found on the energy efficiency class label (www.rutecprojekt.de)

Caution!

Stainless steel downlights require a regular care.

Please do not use any strong cleaner.

We recommend cleaning with

Item No. 55137 (surface cleaner) and

Item No. 55136 (sponge universal cleaner).